

## Adjusting the Laser Beam

1. Pull out the two plugs from the adjustment ports on top of the telescope housing.  
Figure 4.33



Figure 4.33 Laser pointer adjustment ports

2. To correct the vertical position of the laser spot, insert the allen key into the vertical adjustment port and turn it as shown in figure 4.34.